

Wireless Keypad Method of use:

Methods for 1-channel transmit codes: Enter the password for 1 channel and then press the '<' key

Methods for 2-channel transmit codes: Enter the password for 2 channel and then press the '>' key

(1) If the password is correct, the buzzer sounds long and sends the code for about 2 seconds.

(2) If the password is incorrect, the buzzer will beep 5 times in a row, and then you can operate again.

(3) If the password is set to null: the code can be sent directly by pressing the '<' or '>' key.

Changing the Password:

2.1 Changing Channel 1 Password:

a) Press and hold the '0' key and then briefly press the '<' key. Release both keys after hearing a long beep from the buzzer, indicating that you are in Password change mode.

b) Enter the current password and press the '<' key.

3 Enter the new password and press the '<' key to confirm,

d) Re-enter the new password and press the '<' key again to confirm

Example: 011 < 12345678 < 12345678 <

If successful, the buzzer will emit a long beep.

if unsuccessful, the buzzer will emit five short beeps indicating that the two passwords do not match

2.2 Changing Channel 2 Password:

a) Press and hold the '0' key and then briefly press the '>' key. Release both keys after hearing a long beep from the buzzer, indicating that you are in Password change mode.

b) Enter the current password and press the '>' key.

3 Enter the new password and press the '>' key to confirm,

d) Re-enter the new password and press the '>' key again to confirm

Example: 011 > 12345678 > 12345678 >

If successful, the buzzer will emit a long beep.

if unsuccessful, the buzzer will emit five short beeps indicating that the two passwords do not match

If no password is set, simply press the '<' or '>' key twice to transmit the code.

3. Restoring Factory Default Password:

If you have forgotten the password(s) press and hold the "reset" button for around 5 seconds while in sleep mode. When the buzzer beeps both passcodes will be reset to factory defaults.

Default factory password Channel #1:11; Channel #2:22